



PRINTER TROUBLESHOOTING

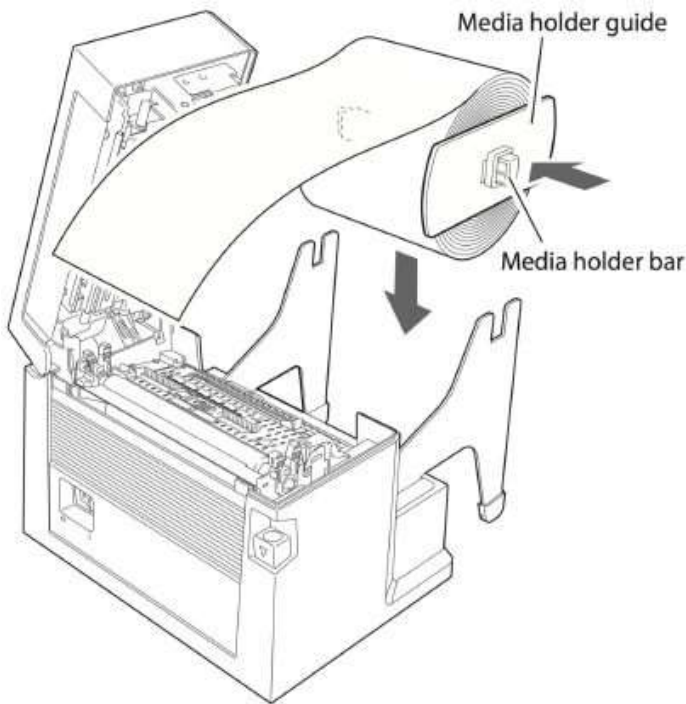

1. Slide the label roll over the media bar. The media guide must be on the right side of the roll of media (as viewed from the front of the printer) with the ribbed surface of the media guide touching the media roll as shown in the illustration.

2. Set the label roll and media holder in to the printer as shown. It is advisable to pull a length of labels forwards and through the mechanism ready for later positioning.

3. Move the label roll so it is touching the left side of the housing. Then slide the black media guide so it is touching the roll on the right side. Do not try to hold the labels too tightly with these guides as it will cause the printer to jam during printing.

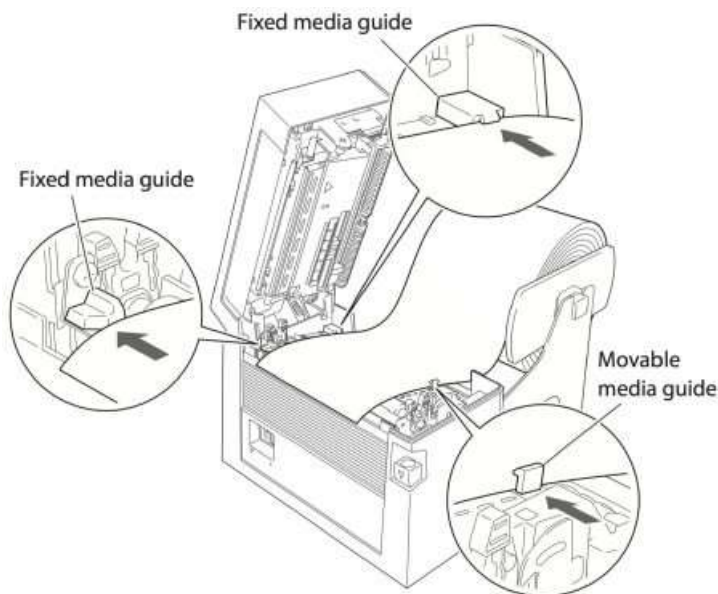

4. Align the label roll with the left fixed media guides (2 places), and align the right movable media guide with the media width.

Note: If Movable Media Guide is not correctly positioned, printer may jam.

5. Lower and lock the printer cover.

6. With the power switched on, push the FEED key to feed the label. It will halt at the next print start position.