


PegasusTM
Powered by Onsite

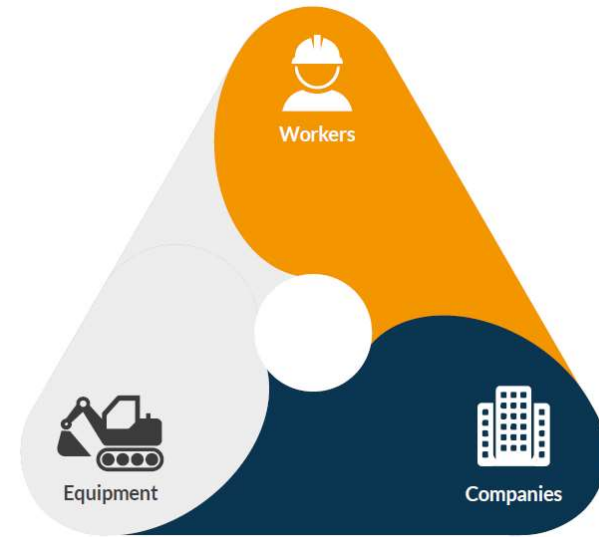

“Globally connecting industry with a safe and pre-qualified workforce”

ToughPad Hardware Breakdown

Why Use a ToughPad



- Rugged Design – Drop Resistant
- Latest Onsite Kiosk Software (LP7)
- Software Upgradable with Patches
- Linux Operating System – Secure, Stable, Configurable
- Uses Sim Card, Wifi or Network Connections
- Contains Stylus
- Works with Printers and BAC devices (Alcolizer/Alcomeasure)

Device Features




- Proximity Card Reader
- Docking Station Lock
- Front Facing Camera
- Stylus Storage
- Online Mode Indicator
- Battery Charge Indicator
- Power Button



Device Features Rear




- Stylus Storage
- COM 1 Port – For BAC Device
- VGA Port (Not Used)
- HDI Port (Not Used)
- USB Ports for Printer/Card Reader
- Network Port
- Power Port

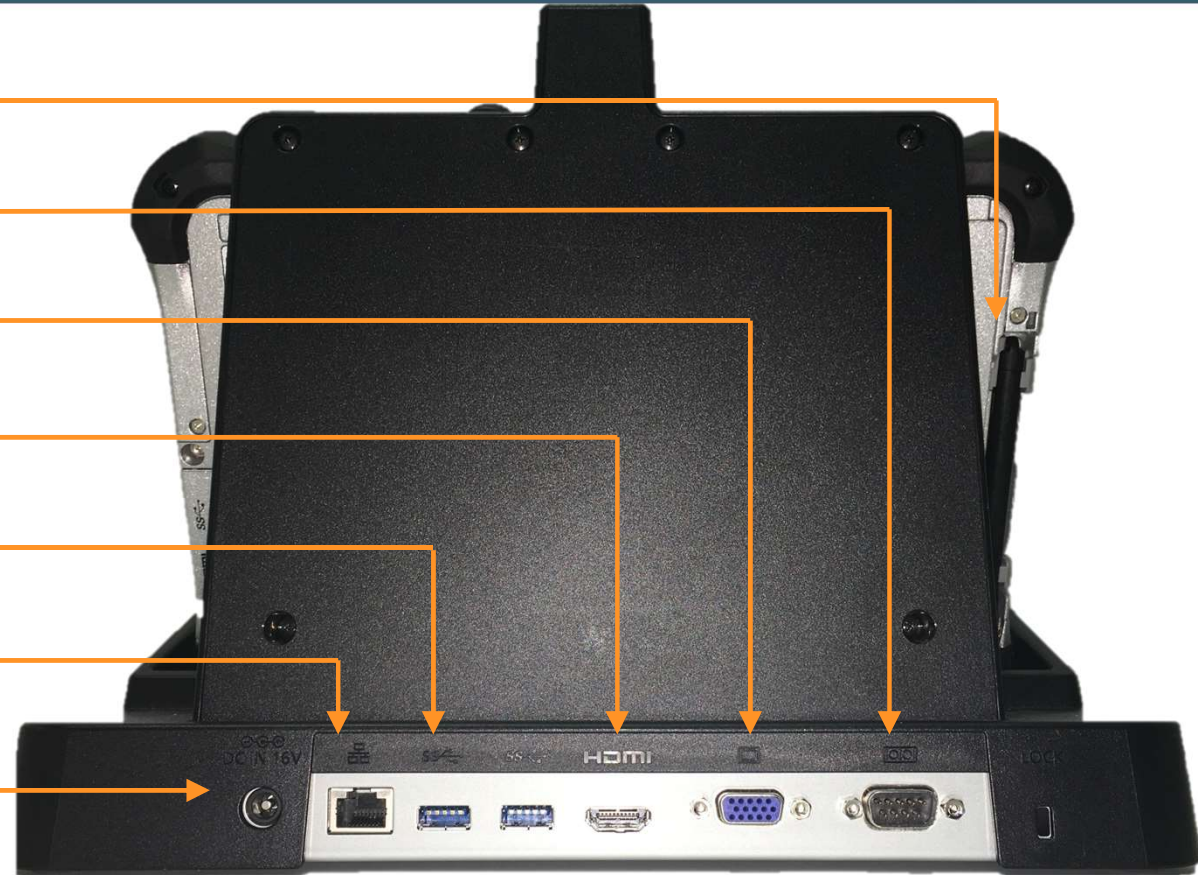

SIGN IN/OUT PROCESS



- Tap Proximity reader when on the Welcome screen if you have your card. This will start the Sign in/out process depending on your status at site.
- Press SIGN IN or SIGN OUT when you don't have your card.
- Press SIGN IN if you are starting work at site. If you are a visitor a sticker will be printed.
- Press SIGN OUT to complete your logout process with site and be recorded as leaving.

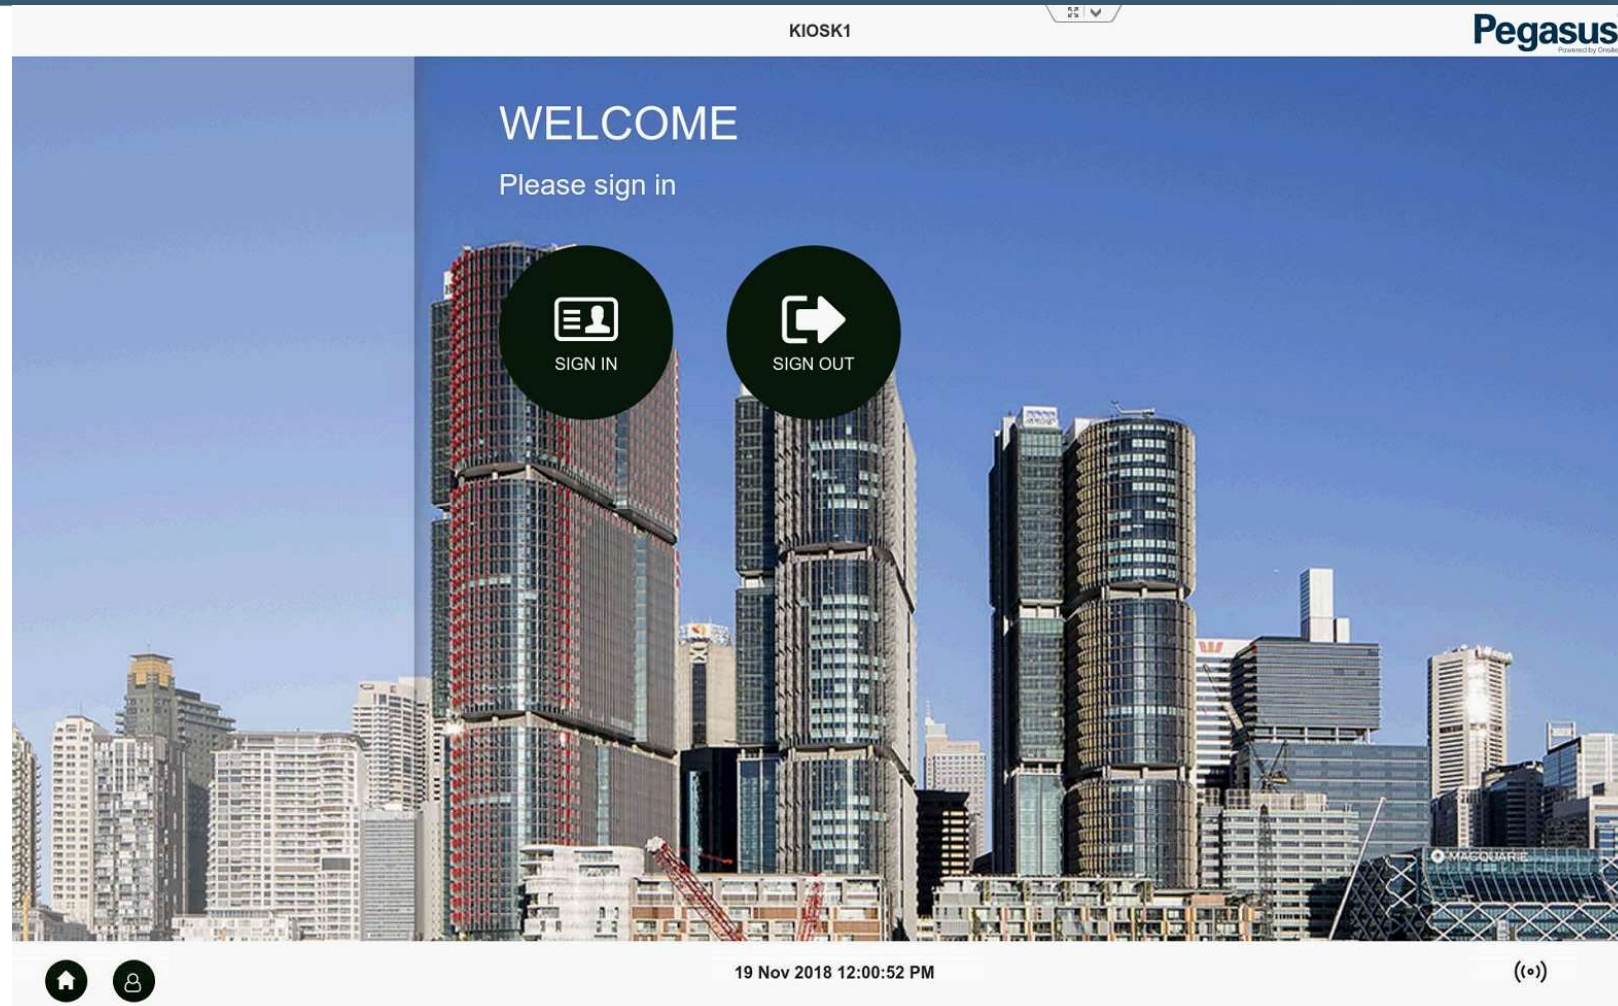

Sign in / Visitor Screen


 


- Cardholders: If you have a card you can tap on here as well. If you don't have your card, enter in your number manually.
- If you are a visitor, use the bottom three fields to enter in your details.
- Ensure that Full Company name, First Name and Last Name and 10 Digit Phone Number are all entered.
- Visitors, when signing out, use the ID number on top of sticker. Or use same details you used to login, to log out here. The system will match you.

The screenshot shows a kiosk interface for signing in. At the top, it says 'KIOSK1' and 'Pegasus Powered by Oracle'. The main heading is 'Let's get you signed in!' with the instruction 'Please swipe your card.' Below this are four input fields: 'Person ID:', 'Your Company:', 'Full Name:', and 'Phone Number:'. A keyboard is visible at the bottom of the screen, and there are 'Cancel' and 'Continue' buttons at the very bottom. A home button is also present in the bottom left corner.

Notes



- Front Buttons Not Configured at this time.
- Only Power Button is active on front panel. Press and hold one second to power on. Press when on to start shutdown process.
- If Removed from Dock, and then re-attached, please shutdown and then restart to ensure all devices are re-detected correctly.
- Battery indicator will animate when power is charging battery 
- Online Indicator status 
- Offline Status Indicator 